



Rural Mailbox Installation

(with shoulder)

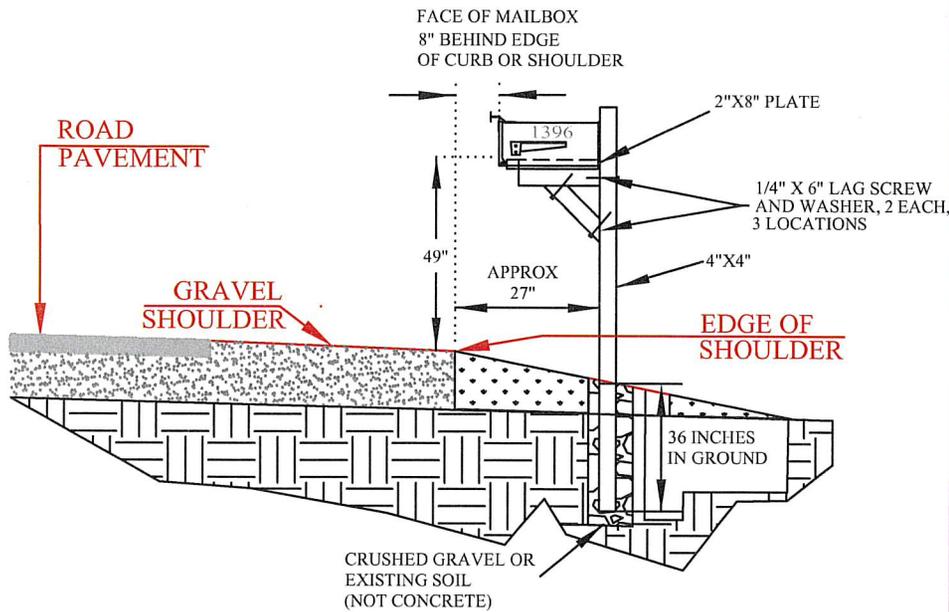


Urban Mailbox Installation

(with curb & gutter)

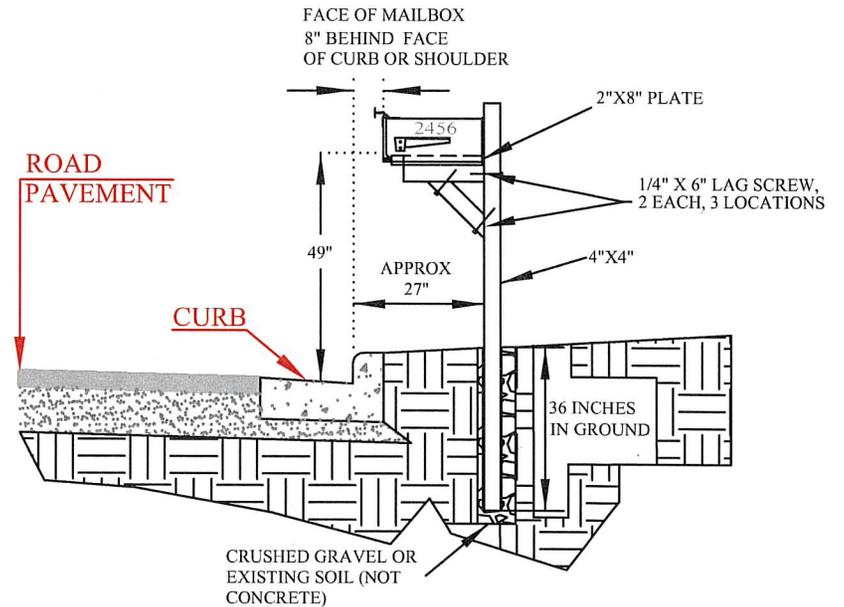

APPROX 8 - 1" SCREWS FOR ATTACHING MAILBOX TO 2"X8" PLATE
 APPROX 4 - 3" DECK SCREWS FOR ATTACHING 2"X8" PLATE TO 4"X4"
 APPROX 6 - 1/4"X6" LAG SCREWS FOR 4"X4"
 ARMS TOGETHER
 2"X8" PLATE CUT TO 17 1/4"X6 1/8"

Multiple Mailboxes

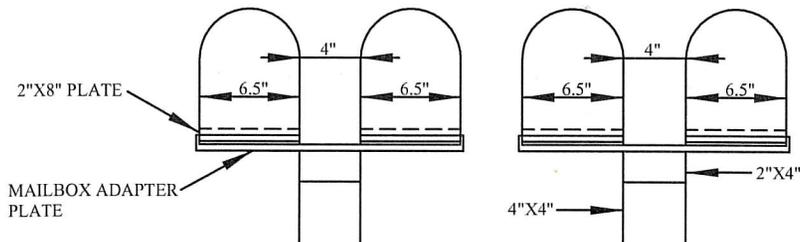

Mailbox VOH Typical Installation
 DETAIL DRAWING

VILLAGE OF
HOWARD
 1336 CORNELL ROAD
 GREEN BAY, WISCONSIN


DRAWN BY:	DATE: 6/24/2015
CHECKED BY:	SCALE: NTS
DWG: Mailbox Typical	REVISIONS:



"Duck Creek"


Rural Mailbox Installation

(with shoulder)

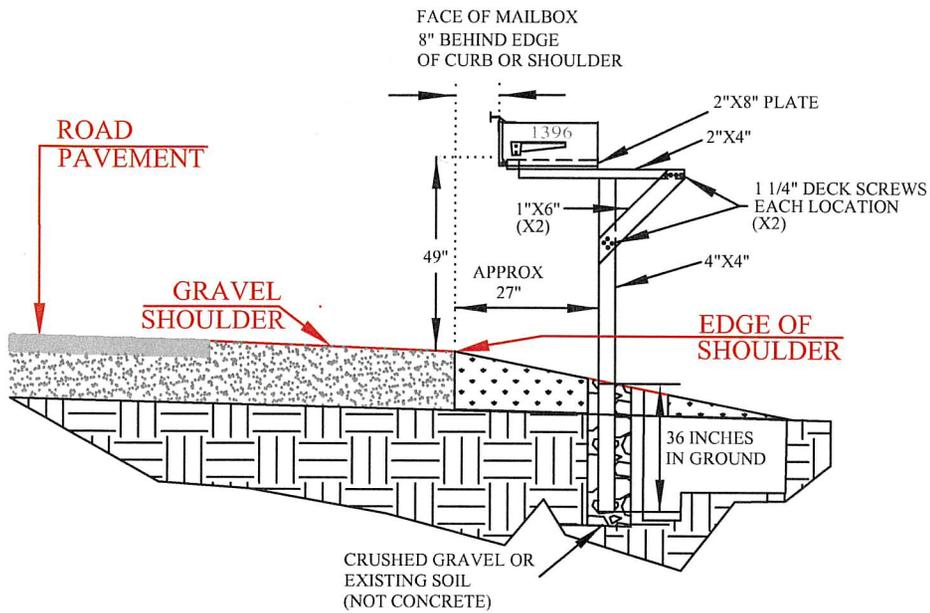


Urban Mailbox Installation

(with curb & gutter)

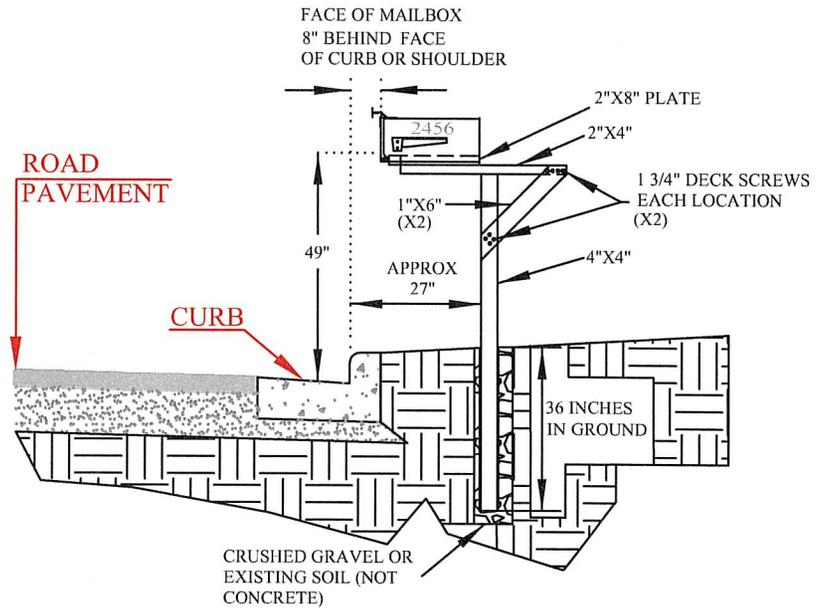

APPROX 8 - 1" SCREWS FOR ATTACHING MAILBOX TO 2"X8" PLATE
 APPROX 4 - 3 1/2" DECK SCREWS FOR ATTACHING 2"X8" PLATE TO 2"X4"
 APPROX 4 - 3 1/2" DECK SCREW FOR ATTACHING 2"X4" TO 4"X4"
 2"X8" PLATE CUT TO 17 1/4"X6 1/8"
 16 - 1 3/4" DECK SCREWS

Multiple Mailboxes

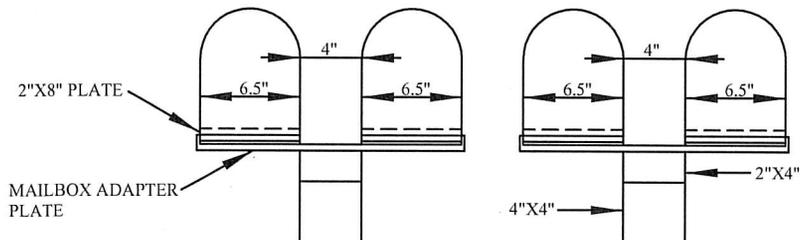

Mailbox Typical Installation
 DETAIL DRAWING

V I L L A G E O F
HOWARD
 1336 CORNELL ROAD
 GREEN BAY, WISCONSIN

DRAWN BY:	DATE: 6/24/2015
CHECKED BY:	SCALE: NTS
DWG: Mailbox Typical	REVISIONS: